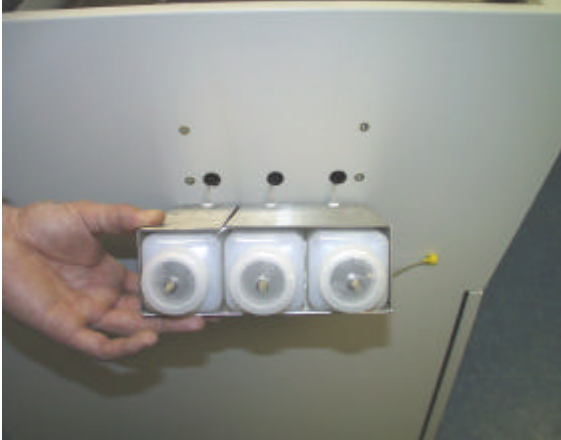
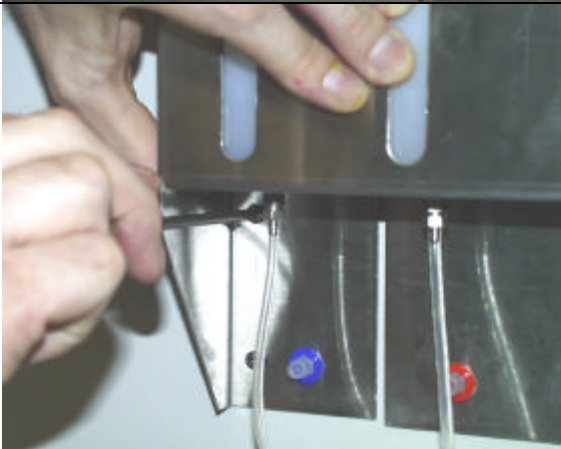

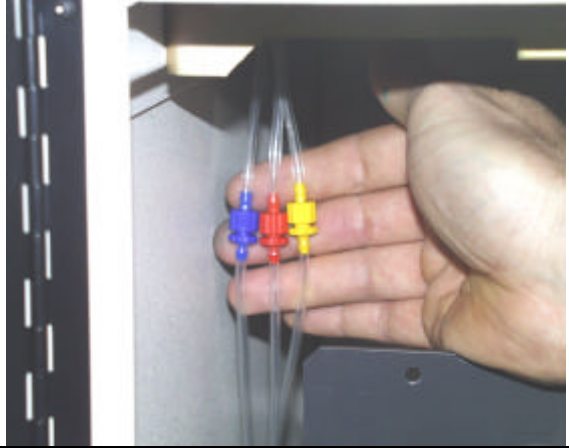


Setting up the Z™402C Printer

This procedure should take approximately 1 hour.

<p>1. Uncrate machine.</p>	
<p>2. Unpack the Z402C accessories</p>	
<p>3. Attach bottle rack to side of machine and insert the tubing in the respective slots.</p> <div data-bbox="284 468 727 562" style="border: 1px solid black; padding: 5px; margin: 10px 0;"><p>NOTE: Machine should be off during set-up.</p></div>	
<p>4. Place screws in the corners and tighten.</p>	
<p>5. Attach hoses to the fittings on the bottle rack.</p>	

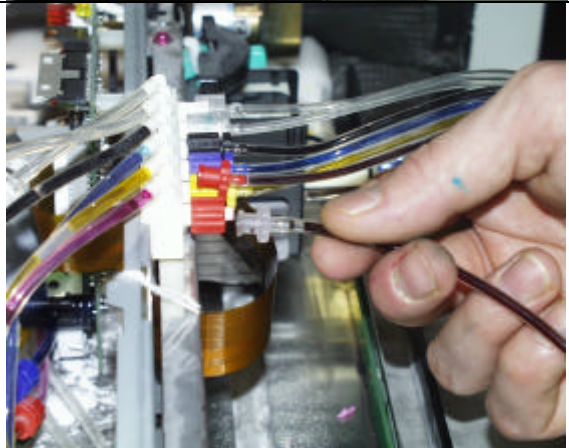
6. Attach the male luer fitting to the female luer fittings located in machine cabinet.


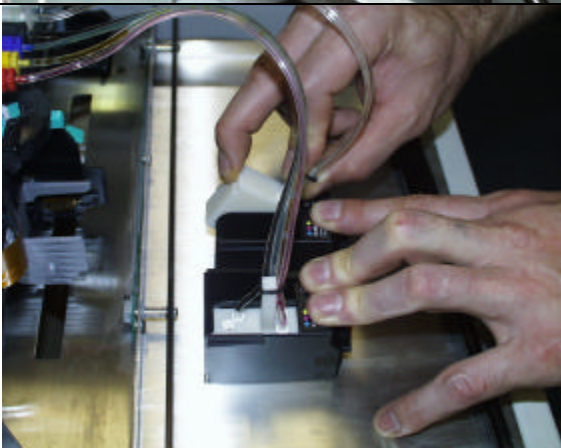
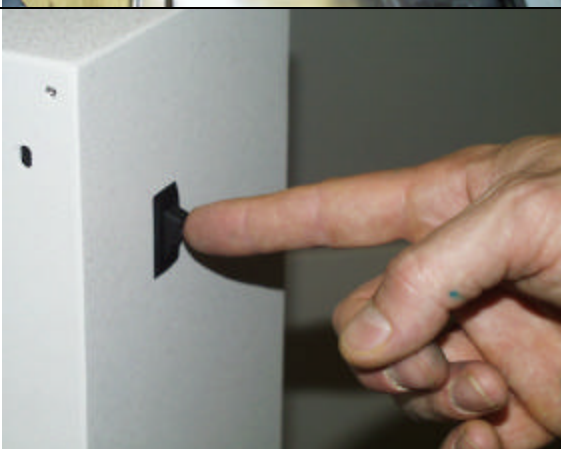
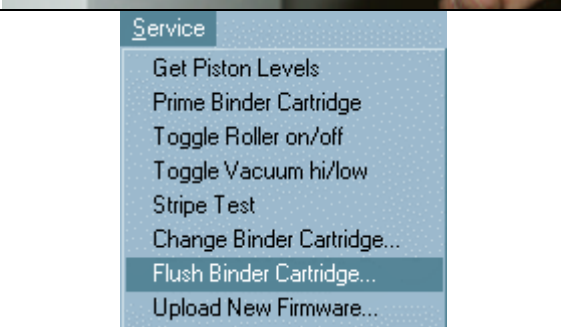


7. Fill reservoirs with binder. The color of the luer fitting below the bottle will let you know which color belongs in each bottle. Do not overtighten the cover.



8. Unscrew the fitting on the manifold and attach the fitting from the syringe.



<p>9. Using syringe supplied in the machine accessories box, draw the primary color binder into the lines. Do this for every primary color tube.</p>	
<p>10. Replace shipment binder with a full gallon of clear zb™7 binder. Then replace color binder cartridge.</p>	
<p>11. Turn machine on.</p>	
<p>12. Install the monochrome Z™402 System Software onto your operating system. 13. Then install the Z402C Desktop Software. Refer to the Z402C Manual for instructions. 14. After software installation, open up the Z402C System Software, choose the Service menu, and click on the “Flush Binder Cartridge” option. Continue to flush the lines until no air is seen in the tubing.</p>	

Please contact the Service Department for additional questions at (781) 852-5053.