



Advisory



Upgrade / Repair / Retrofit



Safety Alert

## UV Bulb Replacement

ProCure

### Description

The UV bulb, P/N 16957-101-00 (Philips TLK 40W/05), is being discontinued. The recommended replacement is, P/N 23365-132-00 (Philips TLK 40W/10).

The UV bulb, P/N 23365-125-00 (Philips TLK 30W/05), is being discontinued. The recommended replacement is, P/N 23363-139-00 (Philips TLK 30W/10).



**Note:** First time replacement of 40W/05 or 30W/05 bulbs requires you to remove and discard all bulbs of this type in the ProCure Chamber.

You must reconfigure the UV bulbs in the ProCure chamber using the type and quantity of bulb specified in the following procedure.

### Procedure

When replacing UV bulbs, the following tables provide the quantity of each type of bulb needed for each ProCure model. When replacing bulbs in systems that already have /10 bulbs in place, take note that the bulbs are not printed in the same way as /03 or /05. The /10 bulbs may only be identified by the word “ACTINIC” printed on the bulb. The diagrams associated with each table provide a front or top view of ProCure UV chamber, with the position for each bulb indicated by the following designators:



Advisory



Upgrade / Repair / Retrofit




Safety Alert

UV Bulb Replacement


ProCure

<b>ProCure Model</b>	P/N 23363-126-00 (Philips 30W/03)	P/N 23363-139-00 (Philips 30W/10)
ProCure 350 (P/N 23363-101-00)	Quantity 8	Quantity 1

Top View of ProCure Chamber

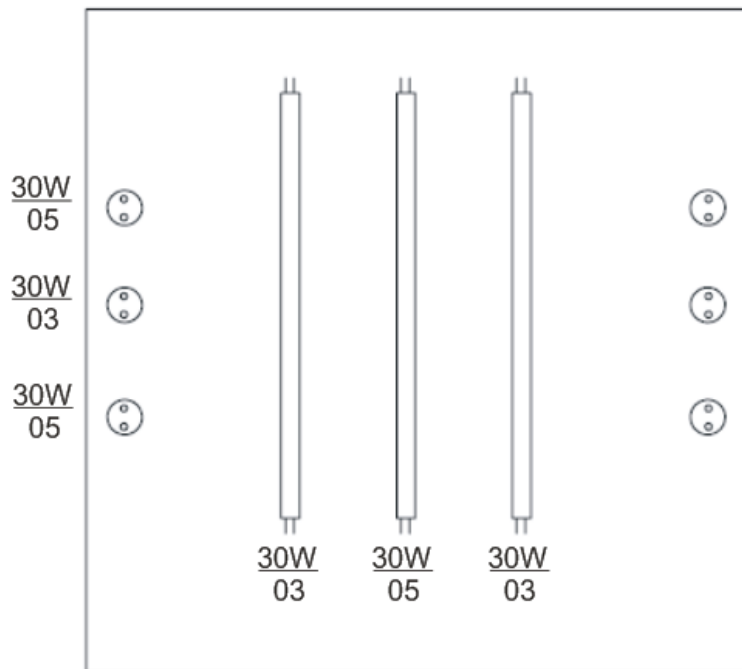

Current Bulb Layout

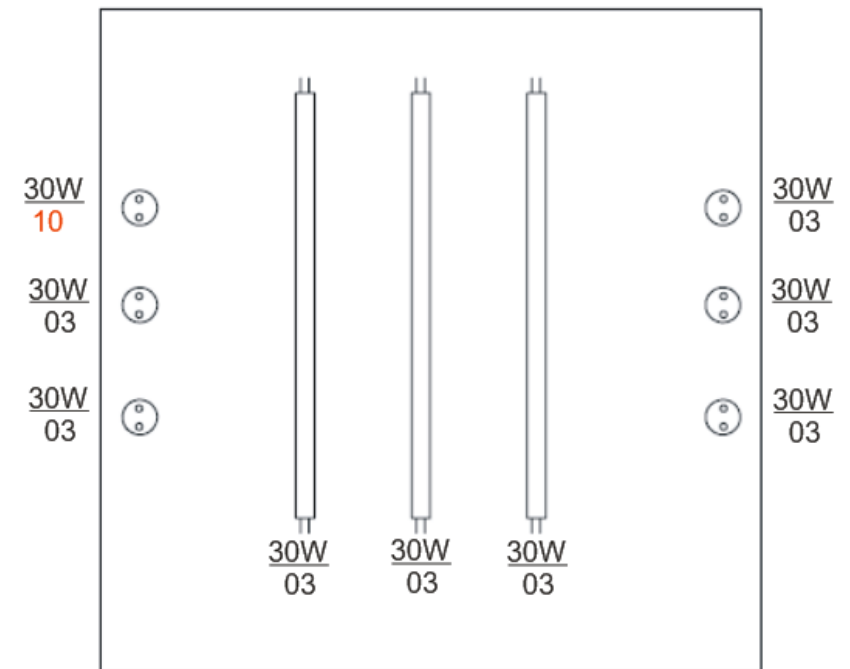

New Bulb Layout



Advisory



Upgrade / Repair / Retrofit




Safety Alert

UV Bulb Replacement


ProCure

ProCure Model	P/N 16965-101-00 (Philips 40W/03)	P/N 23365-132-00 (Philips 40W/10)
PCA-250 (P/N 16990-9XX)	Quantity 9	Quantity 1
PCA-350 (P/N 20478-901)	Quantity 9	Quantity 1
PCA-350/3500 Assy, CE (P/N 21556-902)	Quantity 9	Quantity 1

Front View of ProCure Chamber

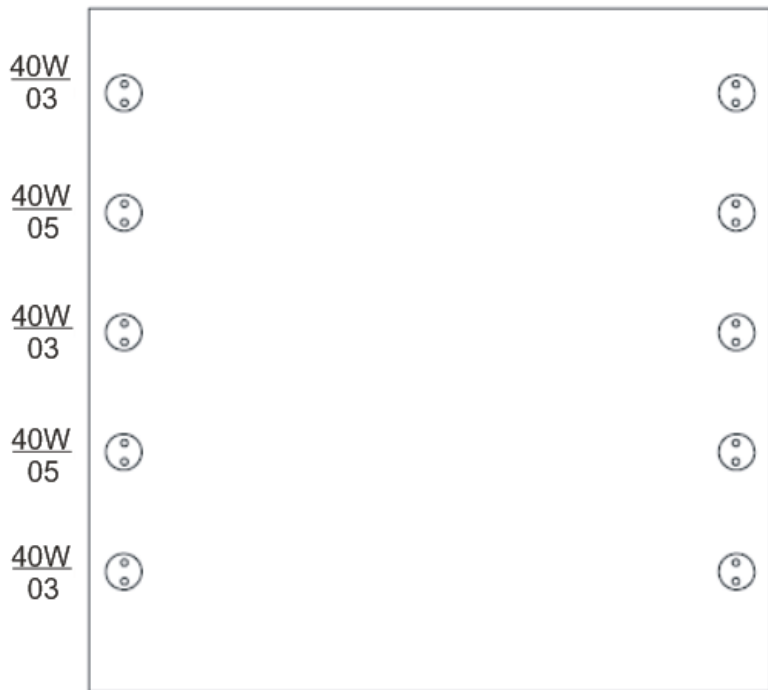

Current Bulb Layout

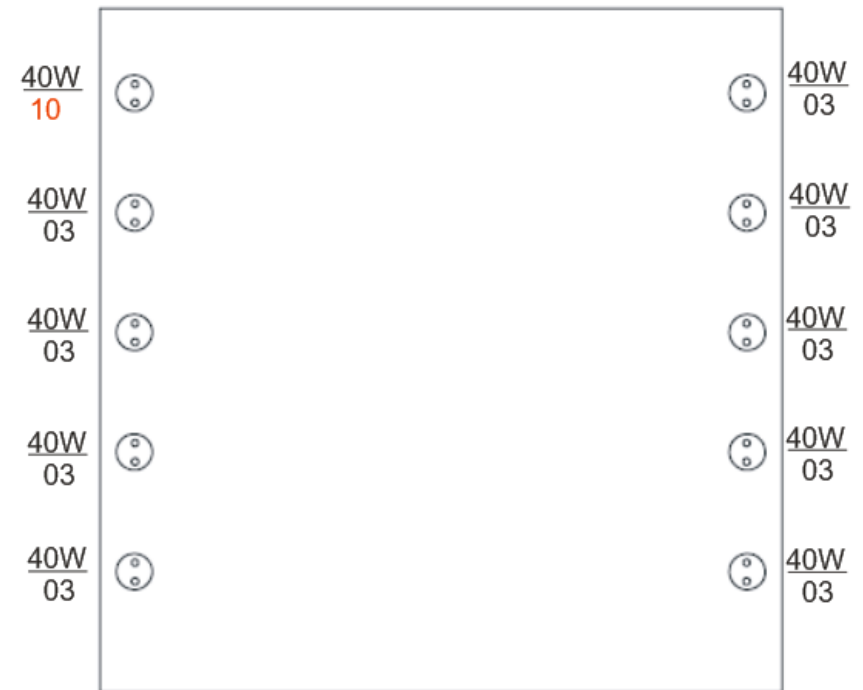

New Bulb Layout



Advisory



Upgrade / Repair / Retrofit




Safety Alert

UV Bulb Replacement


ProCure

ProCure Model	P/N 16965-101-00 (Philips 40W/03)	P/N 23365-132-00 (Philips 40W/10)
PCA 500 System (20795-901-00)	Quantity 14	Quantity 2
PCA-500/5000/7000, CE ( 21431-903)	Quantity 14	Quantity 2

Top View of ProCure Chamber

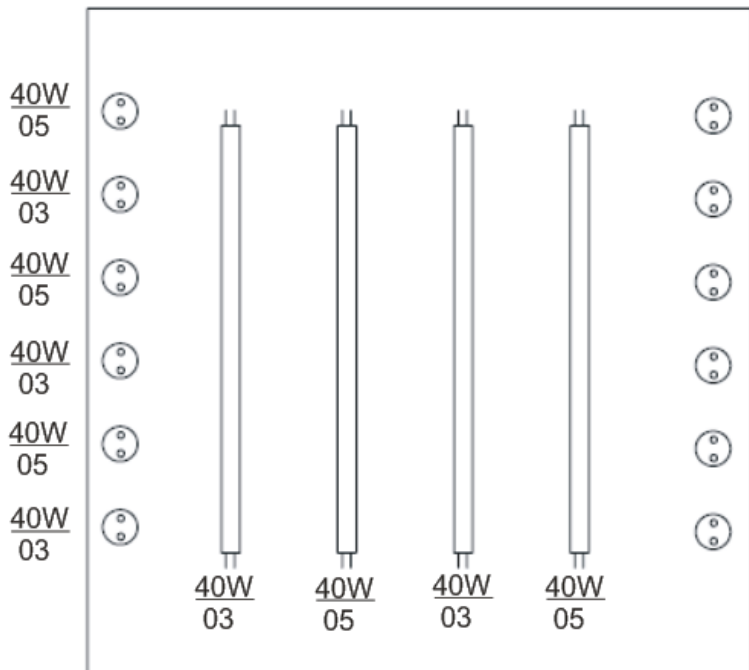

Current Bulb Layout

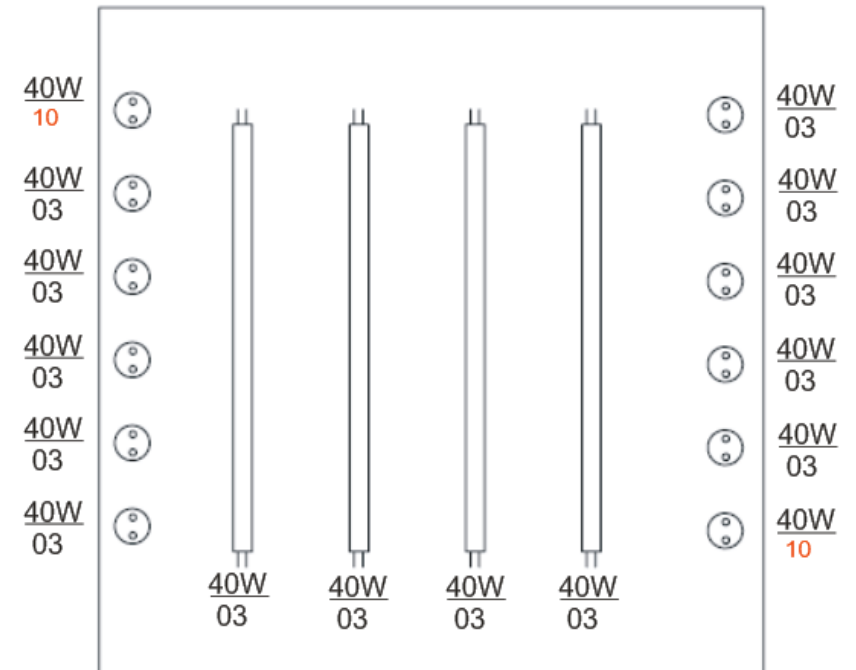

New Bulb Layout



Advisory

Upgrade / Repair / Retrofit


Safety Alert

UV Bulb Replacement


ProCure

<b>ProCure Model</b>	P/N 16965-101-00 (Philips 40W/03)	P/N 23365-132-00 (Philips 40W/10)
ProCure 750 (23365-101-00)	Quantity 19	Quantity 3

Top View of ProCure Chamber

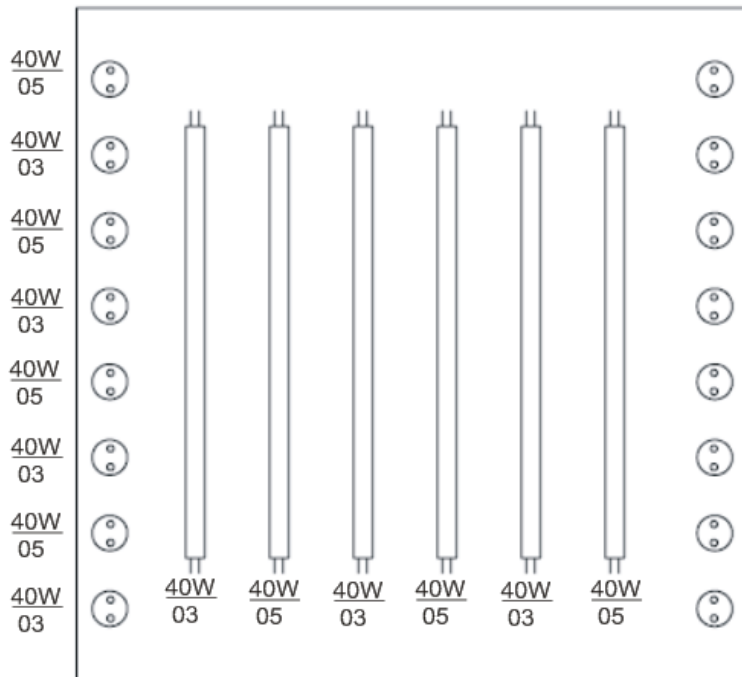

Current Bulb Layout

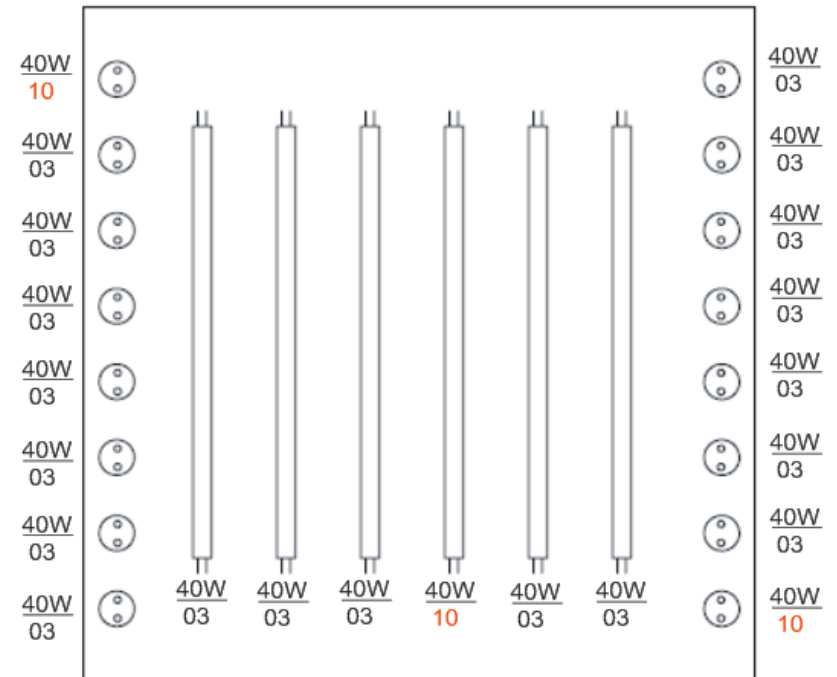

New Bulb Layout